

<b>PRODUCT:</b>	<b>Dahua NVR Startup Wizard</b>
<b>ITEM CODE:</b>	

**Introduction**


This guide has been formulated to assist with the initial setup of Dahua NVR.

1. Check box contents:

- NVR
- Power adaptor
- Mouse

2. Connect:

- Power adaptor to power outlet
- HDMI or VGA cable from monitor to HDMI or VGA output
- RJ45 from router to Network interface port
- Mouse to USB port
- IP camera to PoE Port using Cat5 or Cat6 cable

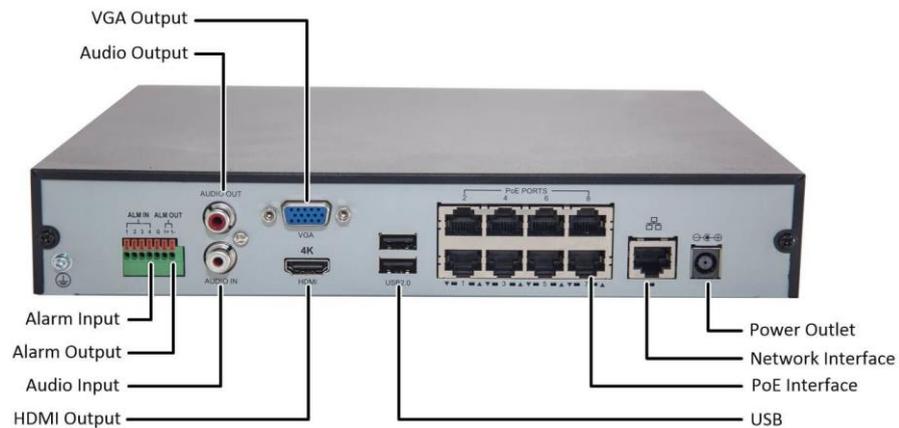

PureTech Electrical Products Ltd. Telephone: +44 (0)2392 488300	Page 1 of 9 Issued By: Technical Dept
Approved By: Technical Manager	Date: 12/02/2024

3. Switch on monitor and NVR for the startup wizard to begin.

Select region, language, and video standard

The screenshot shows the 'Device Initialization' screen with the following settings:

- Region: United Kingdom
- Language: English
- Video Standard: PAL

Time zone and system time


The screenshot shows the 'Device Initialization' screen with the following settings:

- Time Zone: (UTC+00:00) Dublin, Edinburgh, Lisbo...
- System Time: 2022 -04 -19 05 :11 :43


Set a password (min 8 characters)

The screenshot shows the 'Device Initialization' screen at the '1. Password Setting' step. The Username is 'admin'. The Password field is filled with dots and has a strength indicator below it. The Confirm Password field is also filled with dots. The Password Hint field is empty. A note on the right states: 'Password must be 8 to 32 characters, including at least two of the following categories: numbers, uppercase letters, lowercase letters and special characters (Characters like ' ' ; : & cannot be included in ).' The navigation bar shows '1. Password Setting' as the active step, followed by '2. Unlock Pattern' and '3. Password Protection'.

## Set unlock pattern

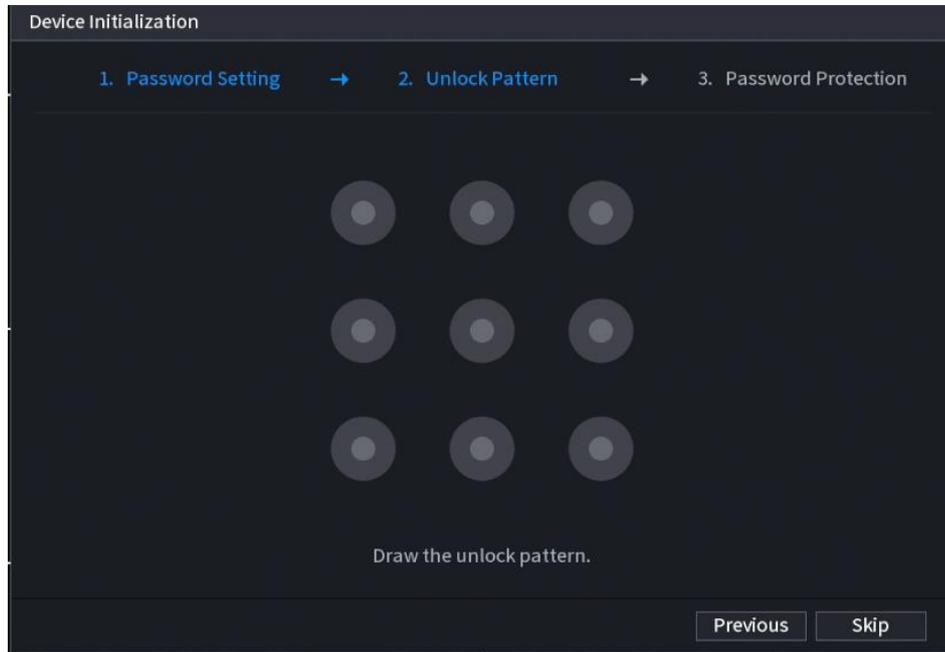


## Set a reserved email (for password recovery)

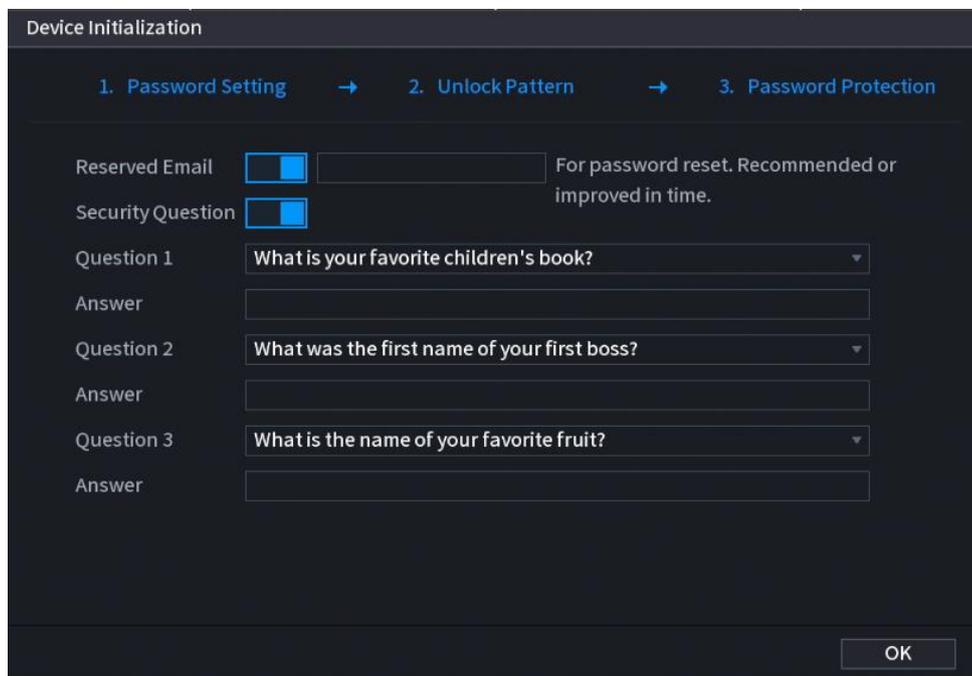


PureTech Electrical Products Ltd. Telephone: +44 (0)2392 488300	Page 3 of 9 Issued By: Technical Dept
Approved By: Technical Manager	Date: 12/02/2024

Leave auto check for updates ticked

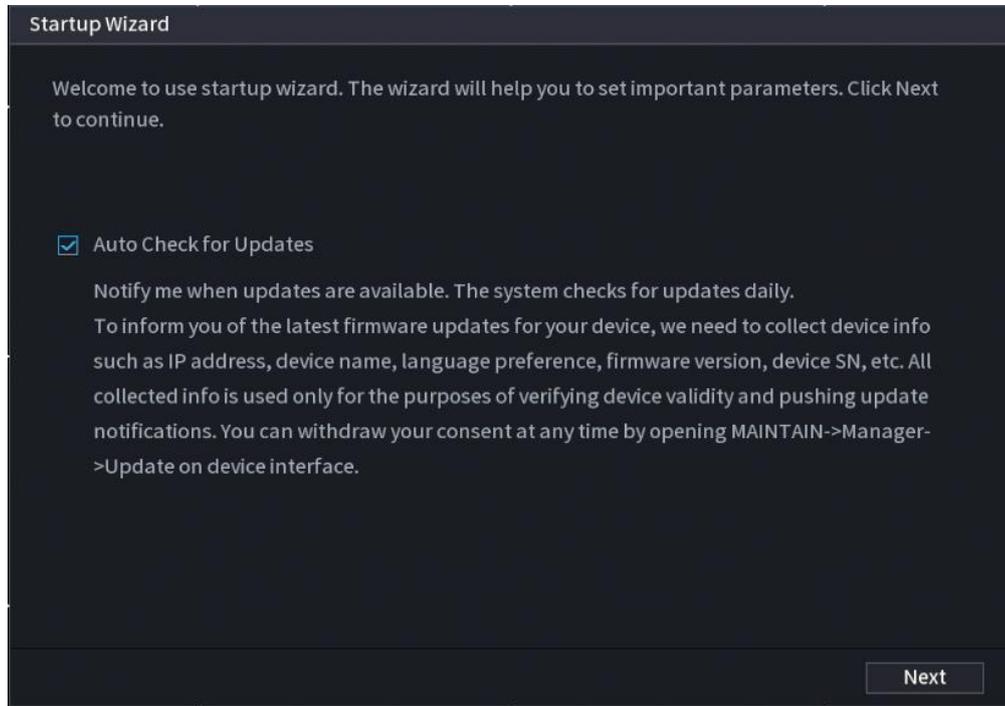

Set device name and video standard

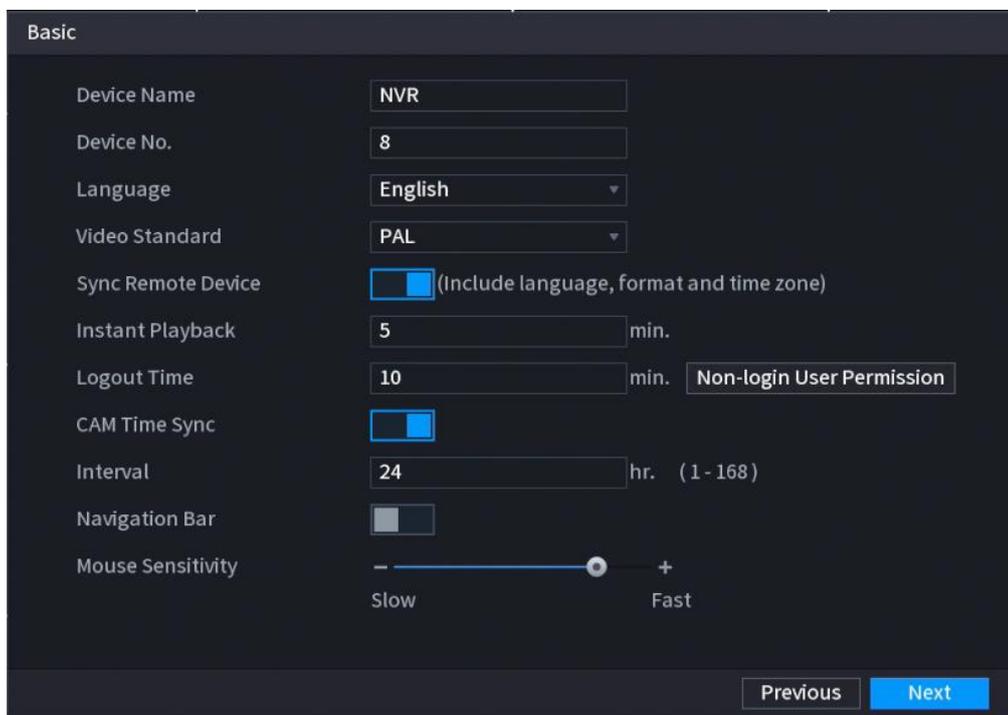

PureTech Electrical Products Ltd. Telephone: +44 (0)2392 488300	Page 4 of 9 Issued By: Technical Dept
Approved By: Technical Manager	Date: 12/02/2024

Set date, timezone, date format and DST

**Date&Time**

System Time: 19 - 04 - 2022 06 : 30 : 18

Time Zone: (UTC+00:00) Dublin, Edinburgh, Lisbon, London Save

Date Format: DD MM YYYY

Date Separator: -

Time Format: 24-Hour

DST:   Date  Week

Start Time: Mar Last Sun 01 : 00

End Time: Oct Last Sun 02 : 00

NTP:

Server Address: time.windows.com Manual Update

Port: 123 ( 1 - 65535 )

Interval: 6 min. ( 0 - 65535 )

Previous Next

Set a holiday period for any time you DON'T want to record.


**Holiday**

0	Status	Name	Date	Duration	Operation


Add

Previous Next

ON TCP/IP click the Pencil icon "Modify"

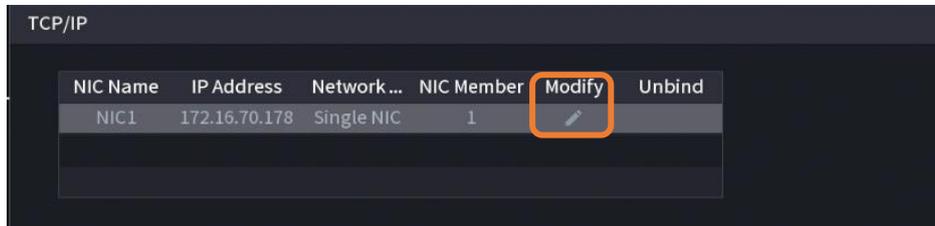

Ensure DHCP is on (in blue) and click ok.

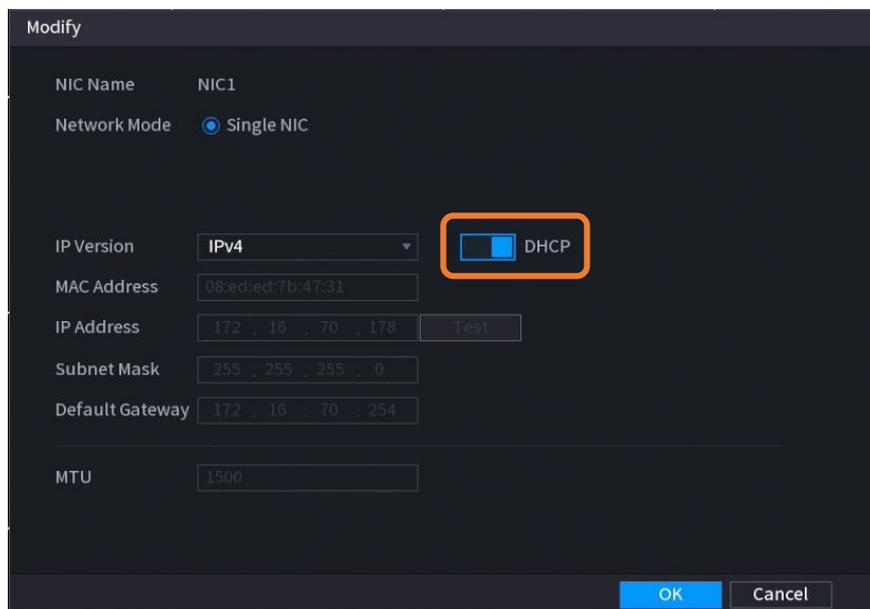

Make sure DHCP is turned on for the DNS and click next


The screenshot shows the 'TCP/IP' configuration screen. At the top, there is a table with columns: NIC Name, IP Address, Network..., NIC Member, Modify, and Unbind. Below the table, the following information is displayed: IP Address: 172.16.70.178, Default Gateway: 172.16.70.254, MTU: 1500, MAC Address: 08:ed:ed:7b:47:31, Subnet Mask: 255.255.255.0, and Mode: DHCP. Under 'IP Version', 'IPv4' is selected, and the 'DHCP' checkbox is checked and highlighted with an orange box. Below this, there are fields for Preferred DNS (10.24.6.2) and Alternate DNS (10.24.6.3), and a Default Card dropdown set to 'NIC1'. At the bottom, there are 'Test', 'Previous', and 'Next' buttons.

Ensure P2P is enabled which should show "online", click next

The screenshot shows the 'P2P' configuration screen. At the top, there is an 'Enable' checkbox which is checked. Below it, there is explanatory text: 'To assist you in remotely managing your device, the P2P will be enabled. After enabling P2P and connecting to Internet, we need to collect IP address, MAC address, device name, device SN, etc. All collected info is used only for the purpose of remote access. If you don't agree to enable P2P function, please deselect the check box.' Below the text, the 'Status' is shown as 'Online'. There are two QR codes: one for the 'Mobile Client' and one for the 'Device SN'. Below the first QR code is the text 'Scan to download'. Below the second QR code is the device SN '6C02E27PAZ1B14E'. At the bottom, there are 'Previous' and 'Next' buttons.

PureTech Electrical Products Ltd. Telephone: +44 (0)2392 488300	Page 7 of 9 Issued By: Technical Dept
Approved By: Technical Manager	Date: 12/02/2024

Search for and add IP cameras connected directly to the back of the NVR.

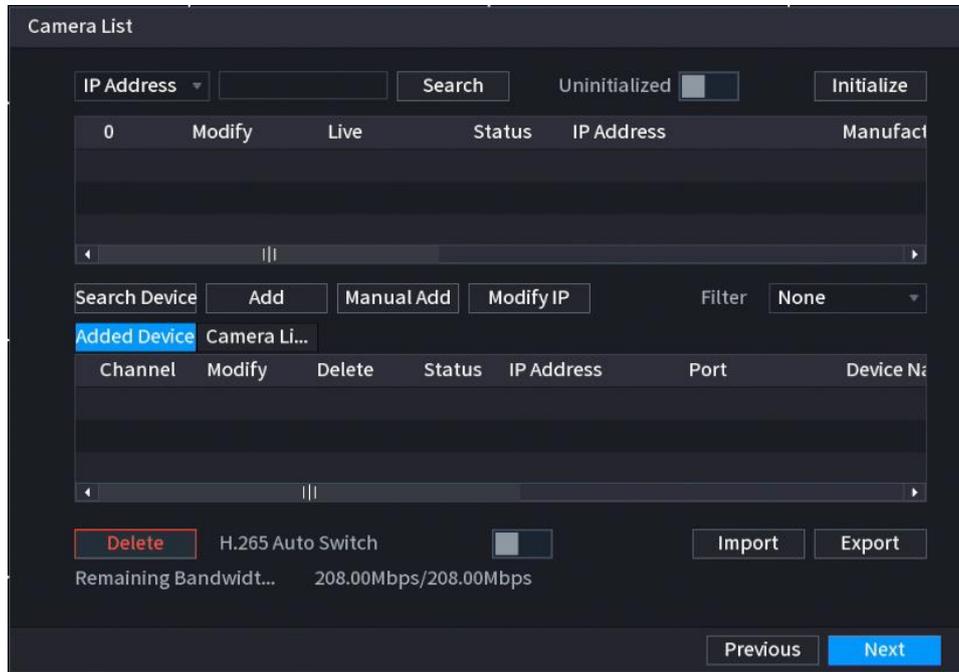


Set the recording schedule for the days and times and for which type of recording.

**General** = Constant recording, Motion = Basic motion detection

**Alarm** = Records when external alarm is triggered

**M&A** = Record when motion AND Alarm are triggered

**Intelligent** = Records when Tripwire or Area Intrusion is triggered

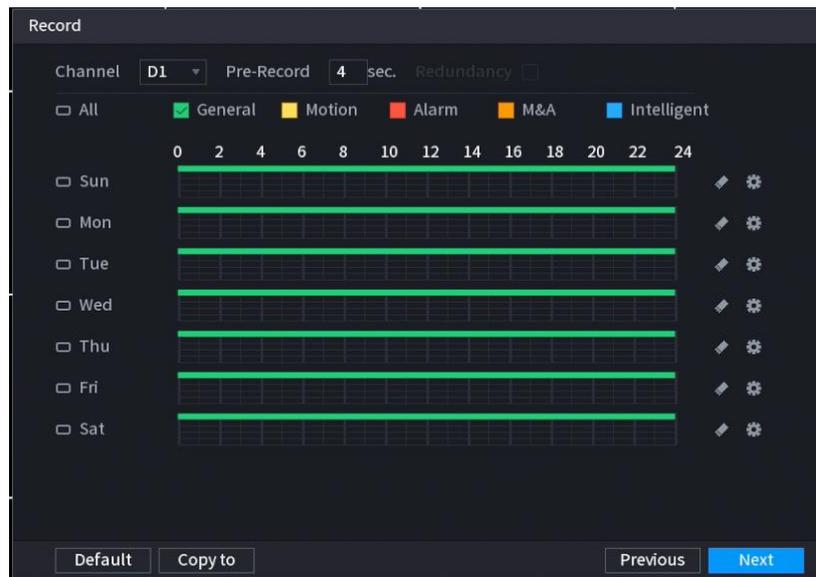

Follow the same process if snapshot (picture) is required.

