


<b>PRODUCT:</b>	<b>Dahua PTZ Autotracking</b>
<b>ITEM CODE:</b>	


**Introduction**

This guide has been formulated to assist with the PTZ auto tracking setup.

1. Open PTZ camera live view, right click > PTZ control. Set the view to which you want to track from. Click “add” in the preset menu.

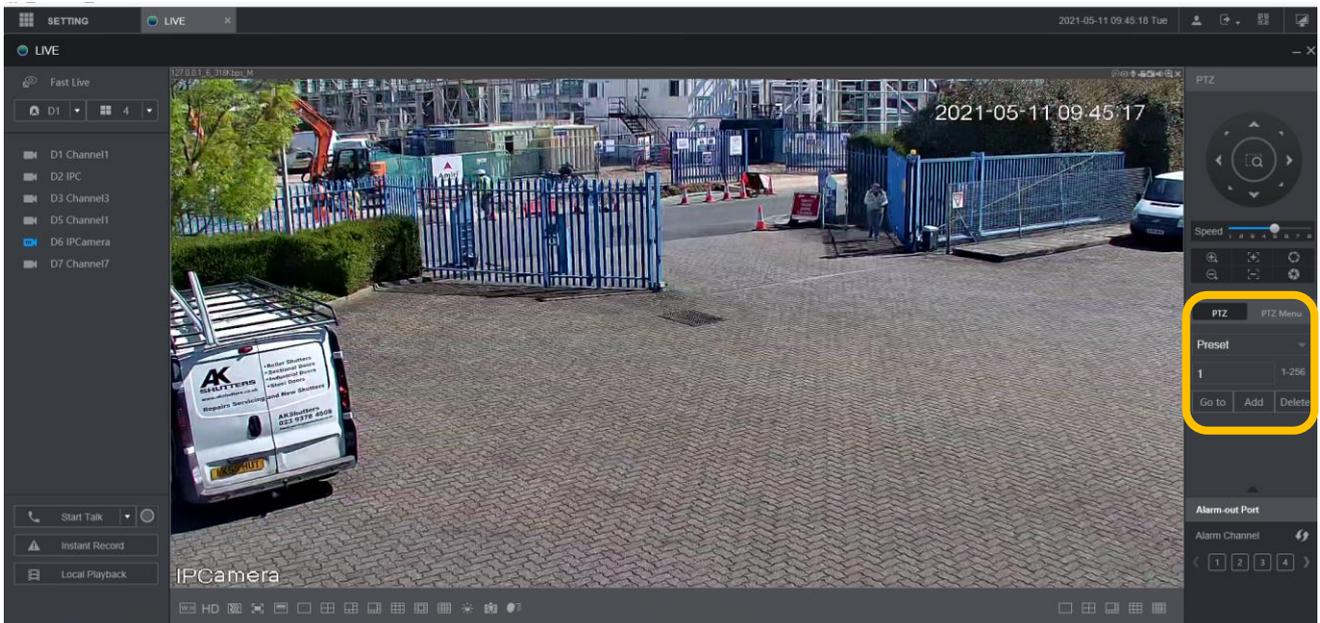


2. Right click > Main Menu > AI > Parameters > Smart Plan and add Smart Plan for the preset just created. (Click the light bulb icon to turn it blue and click apply)
3. Under Parameters select IVS. Select the PTZ channel and click Add.

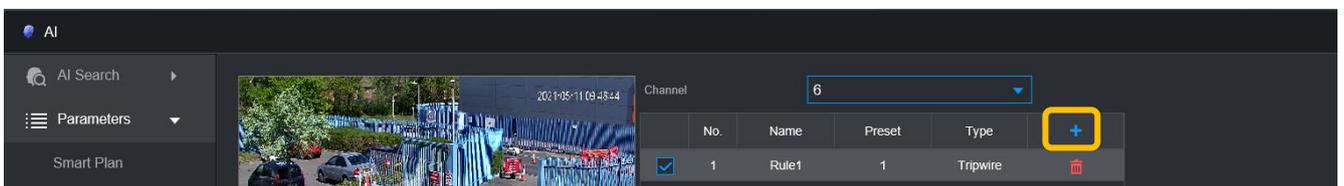


4. Select either Tripwire to draw a single line or Area intrusion to cover an area of the screen and then Draw Rule to draw this.


PureTech Electrical Products Ltd. Telephone: +44 (0)2392 488300	Page 1 of 2 Issued By: Technical Dept
Approved By: Technical Manager	Date: 12/02/2024

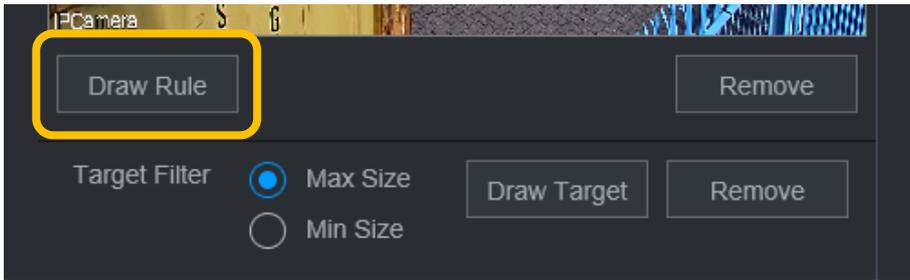

5. Tick "Track Duration" and set a tracking time

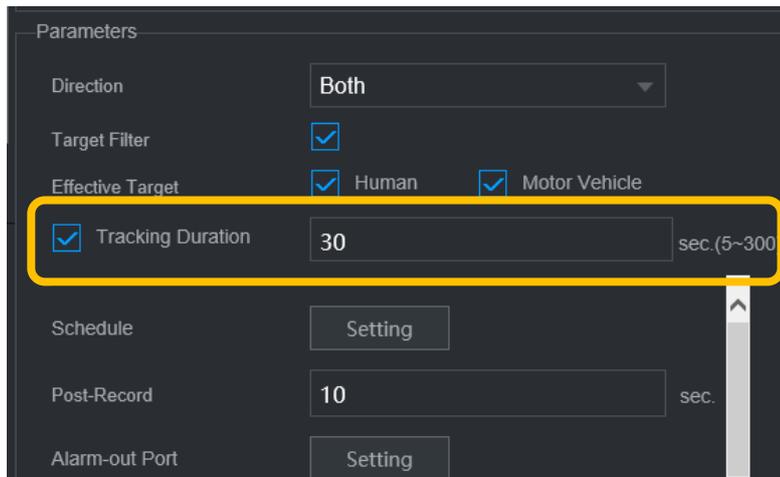

6. You can also specify if you want to track humans and Vehicles.

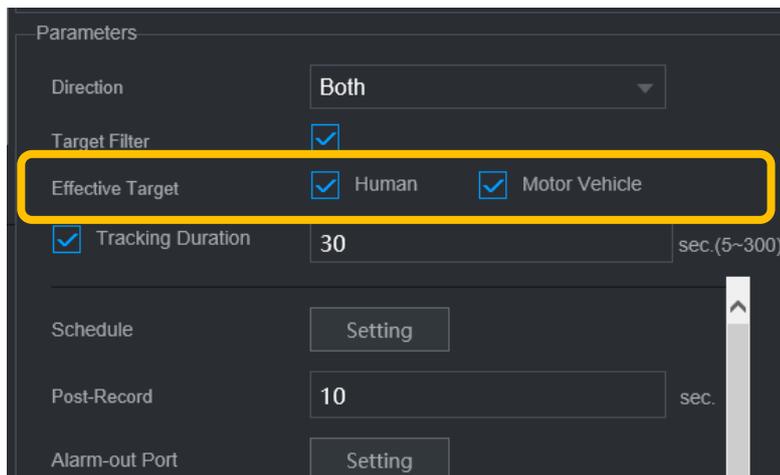

Click apply one finished

PureTech Electrical Products Ltd. Telephone: +44 (0)2392 488300	Page 2 of 2 Issued By: Technical Dept
Approved By: Technical Manager	Date: 12/02/2024