

 
Ref: QRG016

PRODUCT:	Viper PTZ
ITEM CODE:	


Introduction

This guide has been formulated to assist with Viper PTZ Tracking.

- 1. With PTZ camera connected to PoE port of NVR, connect laptop to the same router wifi or via LAN cable. If no router in use, connect laptop direct to LAN port on NVR.
- 2. Open Microsoft Edge and login into the NVR using its IP address (Found under Network settings > TCP/IP on NVR).
- 3. Once logged into NVR, browse to Function Panel > Camera:



 4. Click on the "Settings" cog at the camera.



5. Login into the camera (Default login: User: Admin Password:123456)



PureTech Electrical Products Ltd.	Page 1 of 4
Telephone: +44 (0)2392 488300	Issued By: Technical Dept
Approved By: Technical Manager	Date: 14/05/2024

 


Ref: QRG016


6. Select PTZ function




7. Move camera to desired position using direction controls



 8. Click create and then give preset a name:




9. Under "Event" select Region intrusion.

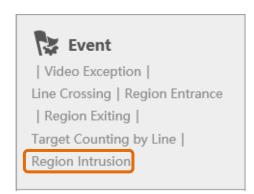

PureTech Electrical Products Ltd.	Page 2 of 4
Telephone: +44 (0)2392 488300	Issued By: Technical Dept
Approved By: Technical Manager	Date: 14/05/2024



Ref: QRG016

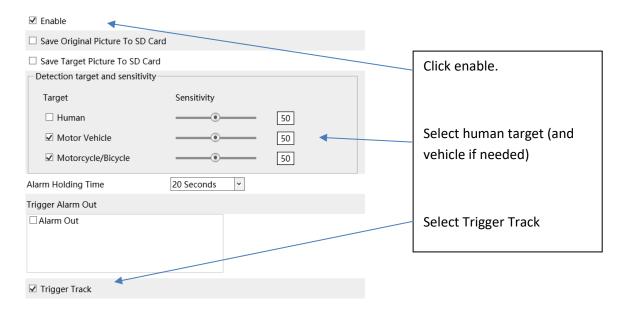

10. Click "Area" and create an area intrusion on the camera image:



11. Select "Smart Tracking" under Event




PureTech Electrical Products Ltd.	Page 3 of 4
Telephone: +44 (0)2392 488300	Issued By: Technical Dept
Approved By: Technical Manager	Date: 14/05/2024



Ref: QRG016

12. Set tracking mode to "PTZ Tracking Priority". This will save automatically.

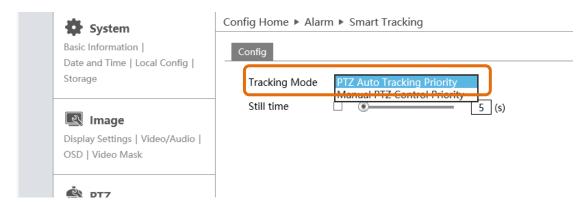

The camera will now track humans who cross the intrusion area.

PureTech Electrical Products Ltd.	Page 4 of 4
Telephone: +44 (0)2392 488300	Issued By: Technical Dept
Approved By: Technical Manager	Date: 14/05/2024